

# ZTH-VAV Label Instructions

|               |  |               |                  |
|---------------|--|---------------|------------------|
| Supply        | AC/DC24 V  | Communication | PP <del>PP</del> |
| Type          | NMV-D2, VRD 2/3, L/NMV-D 2M<br>L/N/SMV-D 2-MP, VRP-M |               |                  |
| Configuration | Press <b>ok</b> while connecting the power           |               |                  |
| Menu options  | L/N/SMV-D2-MP  | read / write  |                  |

  

| Type                                    | Address       |               |
|---|---------------|---------------|
| Position                                | Series-Number | <b>ok</b>     |
| Volume actual value                     |               |               |
| - Setpoint applied                      |               |               |
| - Position of damper                    |               |               |
| - CAV-Step set to ...                   |               | - + <b>ok</b> |
| Mode 0...10 / 2...10V                   |               | - + <b>ok</b> |
| Set <sup>7</sup> to original values     |               | - + <b>ok</b> |
| V <sup>7</sup> min <sup>7</sup> setting |               | - + <b>ok</b> |
| V <sup>7</sup> max <sup>7</sup> setting |               | - + <b>ok</b> |
| V <sup>7</sup> nominal of VAV-unit      |               |               |

*Options depending to VAV type*