 
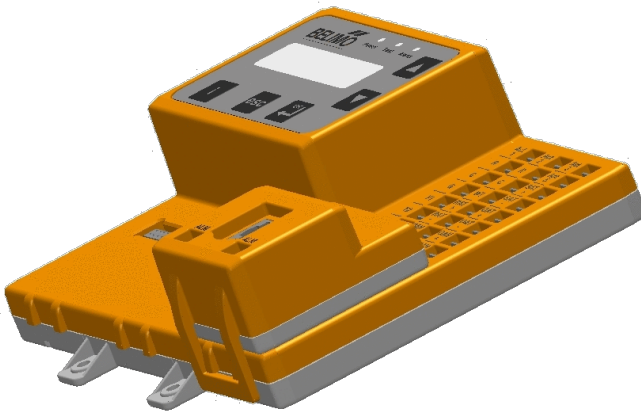 


ZIP Economizer™ Communication Module

 
Installation

Each ZIP Economizer module is designed with a unique form fit which allows it to fit only in one location on the ECON-ZIP-BASE.


Insert the ECON-ZIP-COM module in the far right (designated) slot of the ZIP Economizer base unit. Illustration located below for location.

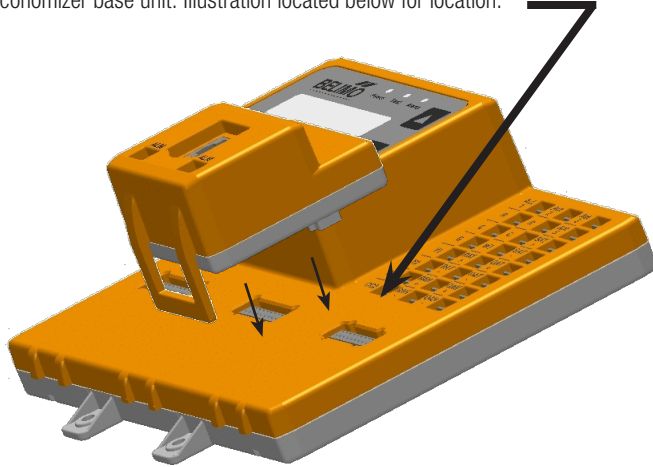


Press firmly to lock the module in place – you will hear a snap.

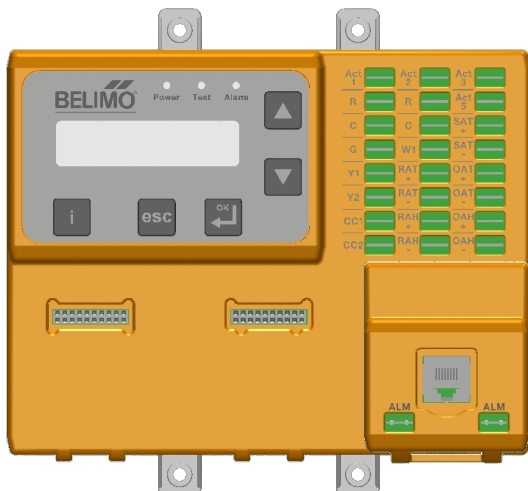

Removal of ECON-ZIP-COM

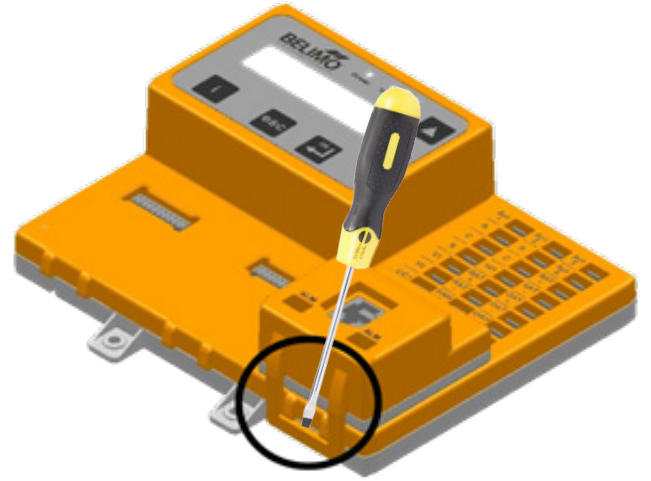 

 Insert a flat head screw driver into the latch of the module. Apply light pressure on the latch away from the base unit. Lift up to remove.

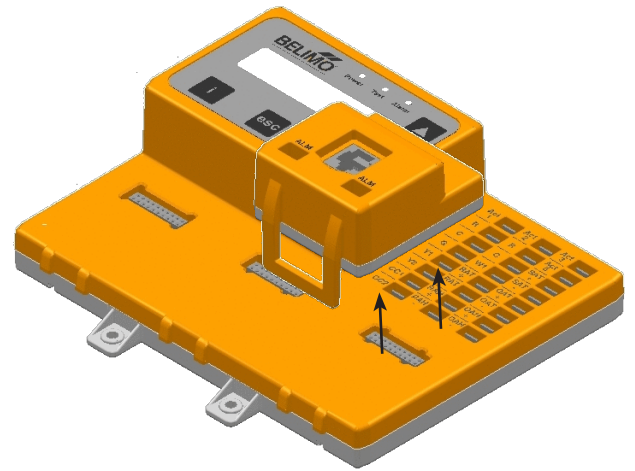

10/12 - Subject to change. © Belimo Aircontrols (USA), Inc.

ECON-ZIP-COM

Technical Data

Type	Name	Description	Electrical Specification
I/O	Comm	Communication interface	RS485 Interface Optical Isolation max. 1k VDC (for max. 1min) Pin 4: RS485 Com Gnd Pin 7: RS485 Com A Pin 8: RS485 Com B
Relay	ALM	Diagnostic alarm	Relay contact 24 V Normal current: 0.5A Inrush current: 1A

ZIP Economizer™ Communication Module

Wiring Diagram

